

AC-45W/19V/2.37A/3*1

Acer Chromebook

R 11 13 14 15 C730E, C738T, C810, CB3-111, CB3-131, CB3-431, CB3-531, CB3-532, CB5-132T, CB5-311, CB5-311P: CB3-111-C4HT
CB3-111-C670 CB3-111-C6EQ CB3-111-C8UB CB3-131-C3SZ CB3-131-C3VC CB3-431-C0AK CB3-431-C5EX CB3-431-C5FM CB3-431-
C5XK CB3-431-C7M1 CB3-531-C4A5 CB3-532-C47C CB5-132T-C1LK CB5-132T-C32M CB5-132T-C8ZW CB5-311-T1UU CB5-311-T677
CB5-311-T7NN CB5-311-T9B0 CB5-311-T9Y2 CB5-311P-T9AB CB5-571-C4G4 C730E-C4BA C730E-C555 C738T-C44Z C810-T78Y
C810-T7ZT C810-T9CA

Acer Aspire V 13 V3-331, V3-371, V3-372T: V3-331-P0QW V3-331-P11X V3-331-P4TE V3-371-51UJ V3-371-56R5 V3-371-57JZ V3-
371-596F V3-372T-5051

Acer Aspire Switch 11, 11V, 12, Alpha 12: SW5-171, SW5-171P, SW5-173, SW5-173P, SW5-271, SA5-271, SA5-271P: SW5-171-325N
SW5-171-34ZR SW5-171-39LB SW5-171-80KM SW5-171-86EE SW5-171P-82B3 SW5-173P-61RD SW5-271-62X3 SW5-271-64V2
SA5-271-57DS SA5-271-594J SA5-271-71NX SA5-271-764D

Acer Aspire One Cloudbook 11, 14: AO1-131, AO1-131M, AO1-431, AO1-431M: AO1-131-C620 AO1-131-C7DW AO1-131-C9PM
AO1-131-C9RK AO1-131M-C1T4 AO1-131M-C667 AO1-431-C3TM AO1-431-C4XG AO1-431-C7F9 AO1-431-C8G8 AO1-431M-C49H

Acer Swift 3 SF314-51: SF314-51-52DH

Acer Spin 5 SP513-51: SP513-51-30EU, SP513-51-55ZR